

Frame Preparation

Inches [mm]

Strike Dimensions

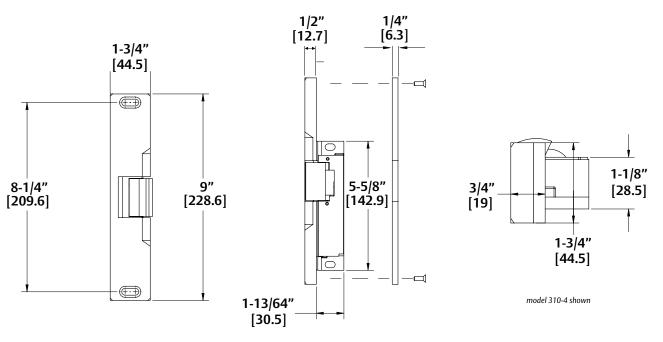

Cutout Template

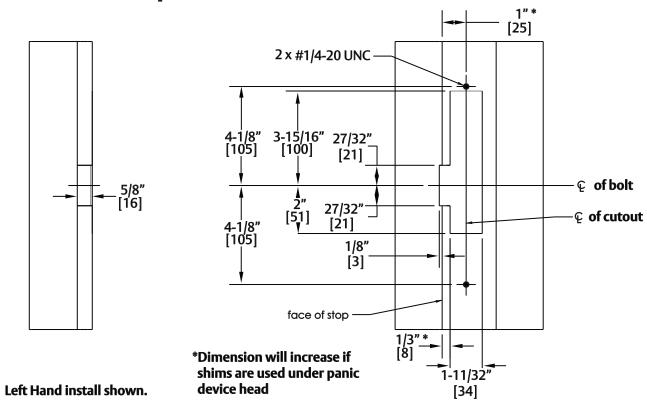

Folger Adam is a brand associated with Hanchett Entry Systems, Inc., an ASSA ABLOY Group company. Copyright © 2016, Hanchett Entry Systems, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of Hanchett Entry Systems, Inc. is prohibited.



Folger Adam 310-4 & 310-4S Series Electric Strikes Installation Instructions

HES, Inc. Phoenix, AZ 800-626-7590 www.hesinnovations.com

 \dashv


Product Components

- ① Electric Strike Body & Faceplate
- 2) #1/4-20 x 1" Faceplate Mounting Screws
- ③ #14-2" Wood Screw

4 #12-24 Body Mounting Screws

41111111111

- ⑤ #8-32 x 3/8" & 3/4" setscrew
- 6 Plug In Connector

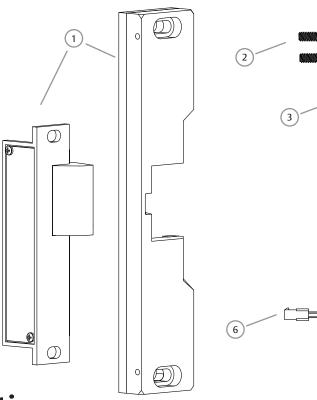



ELECTRICAL RATINGS FOR SOLENOID			
CONTINUOUS DUTY	12 VDC	24 VDC	
Resistance in Ohms	23.5	96	
Amps	.51	.25	
Solenoids are rated at +/- 10% indicated value.			

MINIMUM WIRE GAUGE REQUIREMENTS			
SOLENOID VOLTAGE	12 VDC	24 VDC	
200 feet or less	18 gauge	18 gauge	
200 - 300 feet	16 gauge	18 gauge	
300 - 400 feet	14 gauge	16 gauge	

UL 294 INFORMATION					
Product Type and Model	Access Control Line Security	Destructive Attack	Endurance	Destructive Attack	Conditions and Notes
Electric Strike, Accessory 310-1, -2, -3, -4, -5, or -6 (+) Series (Report Date 1970-2-18)	I	I	IV	I	May include one or more of the following suffixes: DBR, EL, FS, LBM, LCM, LCBM, LCBMA, OB, PK, RF, U, W, SK, 3/4, 1, 2, 3, 8, 30, or 100. Indoor Use Only

ASSA ABLOY, the global leader in door opening solutions

3810006.002, Revision C

Installation Directions

CAUTION!

Before connecting any device at the installation site, verify input voltage using a multimeter. Many power supplies and low voltage transformers operate at higher levels than listed. Any input voltage exceeding 10% of the solenoid rating may cause severe damage to the unit and will void the warranty.

Preparing the Strike

- 1. ATTACH the faceplate to the strike body using the #12-24 x 3/8" Body Mounting screws as illustrated in "Attaching the Faceplate" on Page 3.
- 2. **IF** using the LCBMA (Latchbolt & Locking Cam Monitor), **THEN** SEE "Monitoring Switches" below for wiring instructions.

NOTE: The strike body ships as either a 12 or 24 volt unit and is not field selectable.

3. VERIFY the available voltage is +/- 10% of the rated voltage of the strike body.


Preparing the Frame

- 4. PREPARE frame using the template on Page 4.
- 5. TEST FIT the electric stike in the door frame.
- 6. **IF** there is not enough clearance between the exit device and the door strike, **THEN** REMOVE the spacer plate as shown on Page 3.

Finishing the Installation

- 7. CONNECT the Plug In Connector to the electric strike, and CONNECT wires from the Plug In Connector leads to the power source.
- 8. INSTALL the electric strike unit in jamb cutout, using the provided #12-24 x 1/2" faceplate mounting screws.
- 9. ADJUST the strike horizontally as shown on Page 3 to accomodate any door silencers or smoke seals.

Monitoring Switches

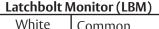

White	Common
Orange	Normally Open
Green	Normally Closed




Locking Cam Monitor (LCM)

	(==:::)	ll .	
When Secure			
Brown	Common	Brown —	\bigcirc
Blue	Normally Open	Blue	-
Yellow	Normally Closed	Yellow/	Ę

Installation Directions

Attaching the Faceplate


- 1. To attach the 310 series electric strike body to the faceplate, INSTALL with two #8-32 body mounting screws, as shown.
- 2. ENSURE body mounting screws are tightened and secured.
- 3 ADJUST the keeper position by loosening the #8-32 body mounting screws, and repositioning the strike body as needed.
- 4. RETIGHTEN the #8-32 body mounting screws after adjustment is made.

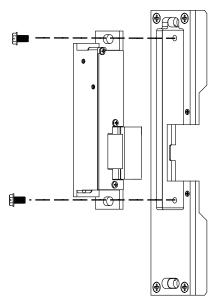

Removing the 1/4" Spacer Plate

NOTE: A 1/4" spacer plate is preinstalled to the strike faceplate. Removal of the spacer plate will decrease faceplate thickness from 3/4" to 1/2".

- 1. REMOVE the four #8-32 screws and two #2-56 screws.
- 2. REMOVE the spacer plate.

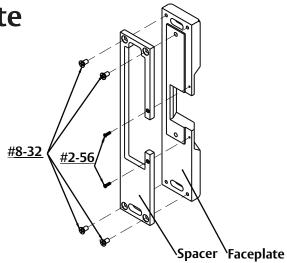


Adjusting the Horizontal

- 1. LOOSEN the two #1/4-20 faceplate mounting screws.
- 2. ADJUST the strike to the appropriate position.
- 3. TIGHTEN the two #1/4-20 faceplate mounting screws.

NOTE: A 3/8" and 3/4" setscrew are provided. Proper selection will secure the #1/4-20 faceplate mounting screws, but not protrude from the strike body.

4. LOCK DOWN the adjustment by installing the provided set screws.

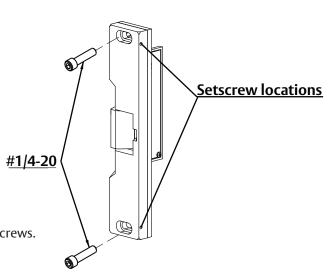

3