8



HES, Inc. Phoenix, AZ 800-626-7590

www.hesinnovations.com


Copyright © 2016, Hanchett Entry Systems, Inc., an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Hanchett Entry Systems, Inc. is prohibited.




# Folger Adam 310-6-1, 310-6-2, 310-6-3, 310-6-8, and 31-6-30 Series Electric Strike

## **Installation Instructions**

## **Product Components**

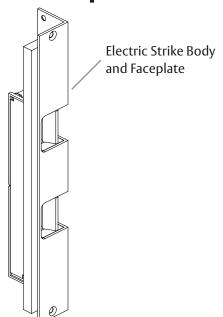

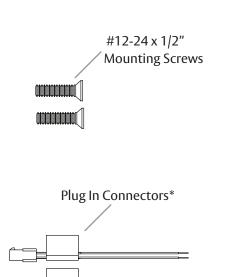

\*Only 1 Plug In Connector is used with 310-6-30

## **Specifications**

ELECTRICAL RATINGS FOR SOLENOID				
CONTINUOUS DUTY	12 VDC	24 VDC		
Resistance in Ohms	23.5	96		
Amps	.51	.25		
Solenoids are rated at +/- 10% indicated value.				

MINIMUM WIRE GAUGE REQUIREMENTS			
SOLENOID VOLTAGE	12 VDC	24 VDC	
200 feet or less	18 gauge	18 gauge	
200 - 300 feet	16 gauge	18 gauge	
300 - 400 feet	14 gauge	16 gauge	

UL 294 INFORMATION					
Product Type and Model	Access Control Line Security	Destructive Attack	Endurance	Destructive Attack	Conditions and Notes
Electric Strike, Accessory 310-1, -2, -3, -4, -5, or -6 (+) Series (Report Date 1970-2-18)	I	I	IV	I	May include one or more of the following suffixes: DBR, EL, FS, LBM, LCM, LCBM, LCBMA, OB, PK, RF, U, W, SK, 3/4, 1, 2, 3, 8, 30, or 100. Indoor Use Only

## **Installation Directions**

#### **CAUTION!**

Before connecting any device at the installation site, verify input voltage using a multimeter. Many power supplies and low voltage transformers operate at higher levels than listed. Any input voltage exceeding 10% of the solenoid rating may cause severe damage to the unit and will void the warranty.

## **Preparing the Strike**

- 1. ATTACH the faceplate to the strike body using the #12-24 x 3/8" Body Mounting screws as illustrated in "Attaching the Faceplate" on Page 3.
- 2. **IF** using the Latchbolt Monitor and Locking Cam Monitor, **THEN** SEE "Monitoring Switches" below for wiring instructions.

**NOTE:** The strike body ships as either a 12 or 24 volt unit and is not field selectable.

3. VERIFY the available voltage is +/- 10% of the rated voltage of the strike body.

## **Preparing the Frame**

4. PREPARE frame using the applicable template on Pages 3–7.

 
2

## Finishing the Installation

- 5. CONNECT the Plug In Connector to the electric strike, and CONNECT wires from the Plug In Connector leads to the power source.
- 6. INSTALL the electric strike unit in jamb cutout, using the provided #12-24 x 1/2" faceplate mounting screws.


## **Monitoring Switches**






#### Locking Cam Monitor (LCM)

 
When Secure		
Brown	Common	
Blue	Normally Open	
Yellow	Normally Closed	





## **Cutout Templates (cont.)**

 
#### 310-6-30 Template & Dimensions

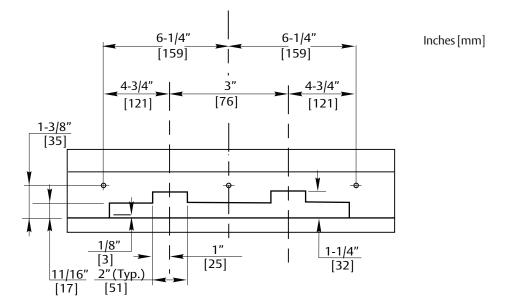

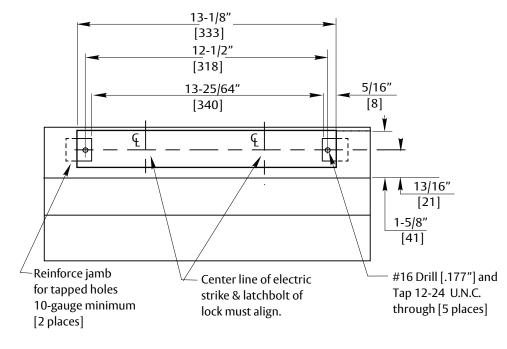

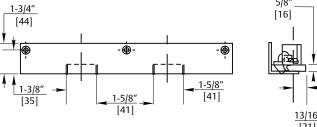




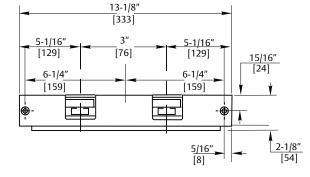



**Cutout Templates (cont.)** 


## 6

 
## 310-6-8 Template & Dimensions

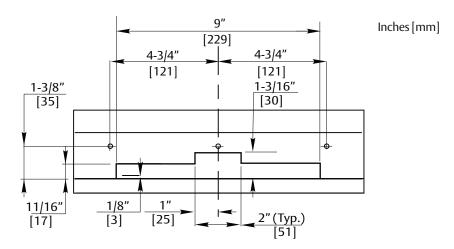

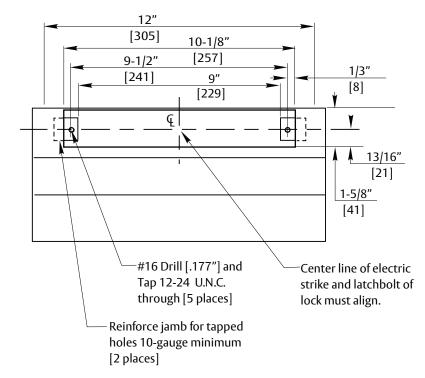

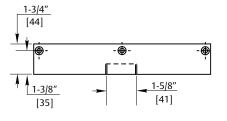





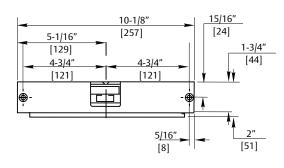



# **Cutout Templates**

 
## 310-6-1 Template & Dimensions

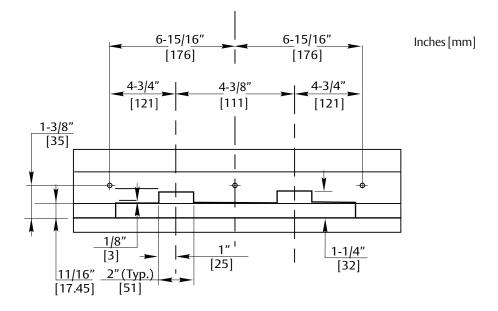

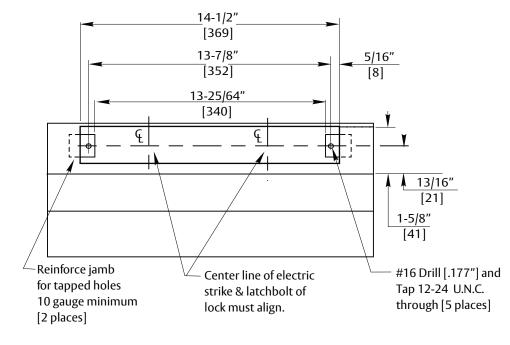

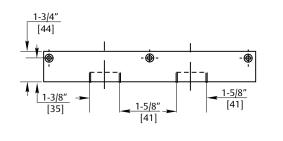




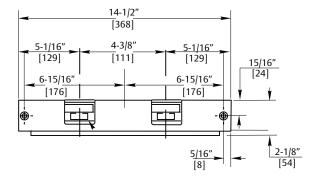



**Cutout Templates (cont.)** 


#### 4

 
## 310-6-2 Template & Dimensions

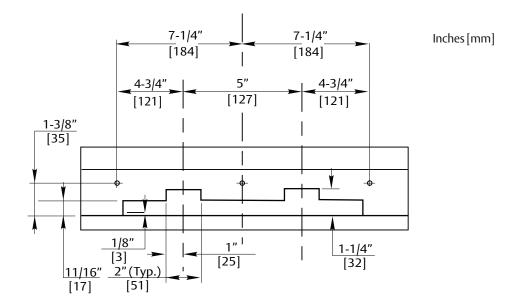

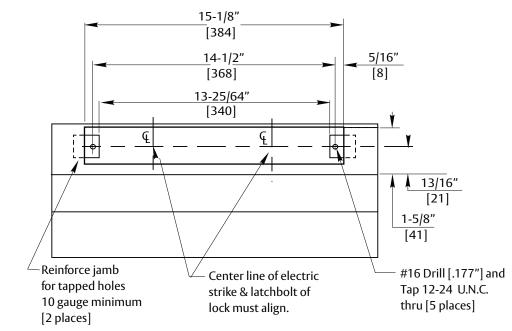

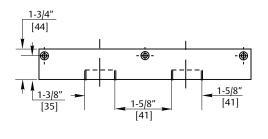



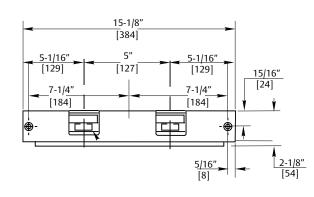

## **Cutout Templates (cont.)**

## 310-6-3 Template & Dimensions

